


NW-2-9KFP MANUAL

9,000 lb. Capacity Two-Post Base-plate Lift

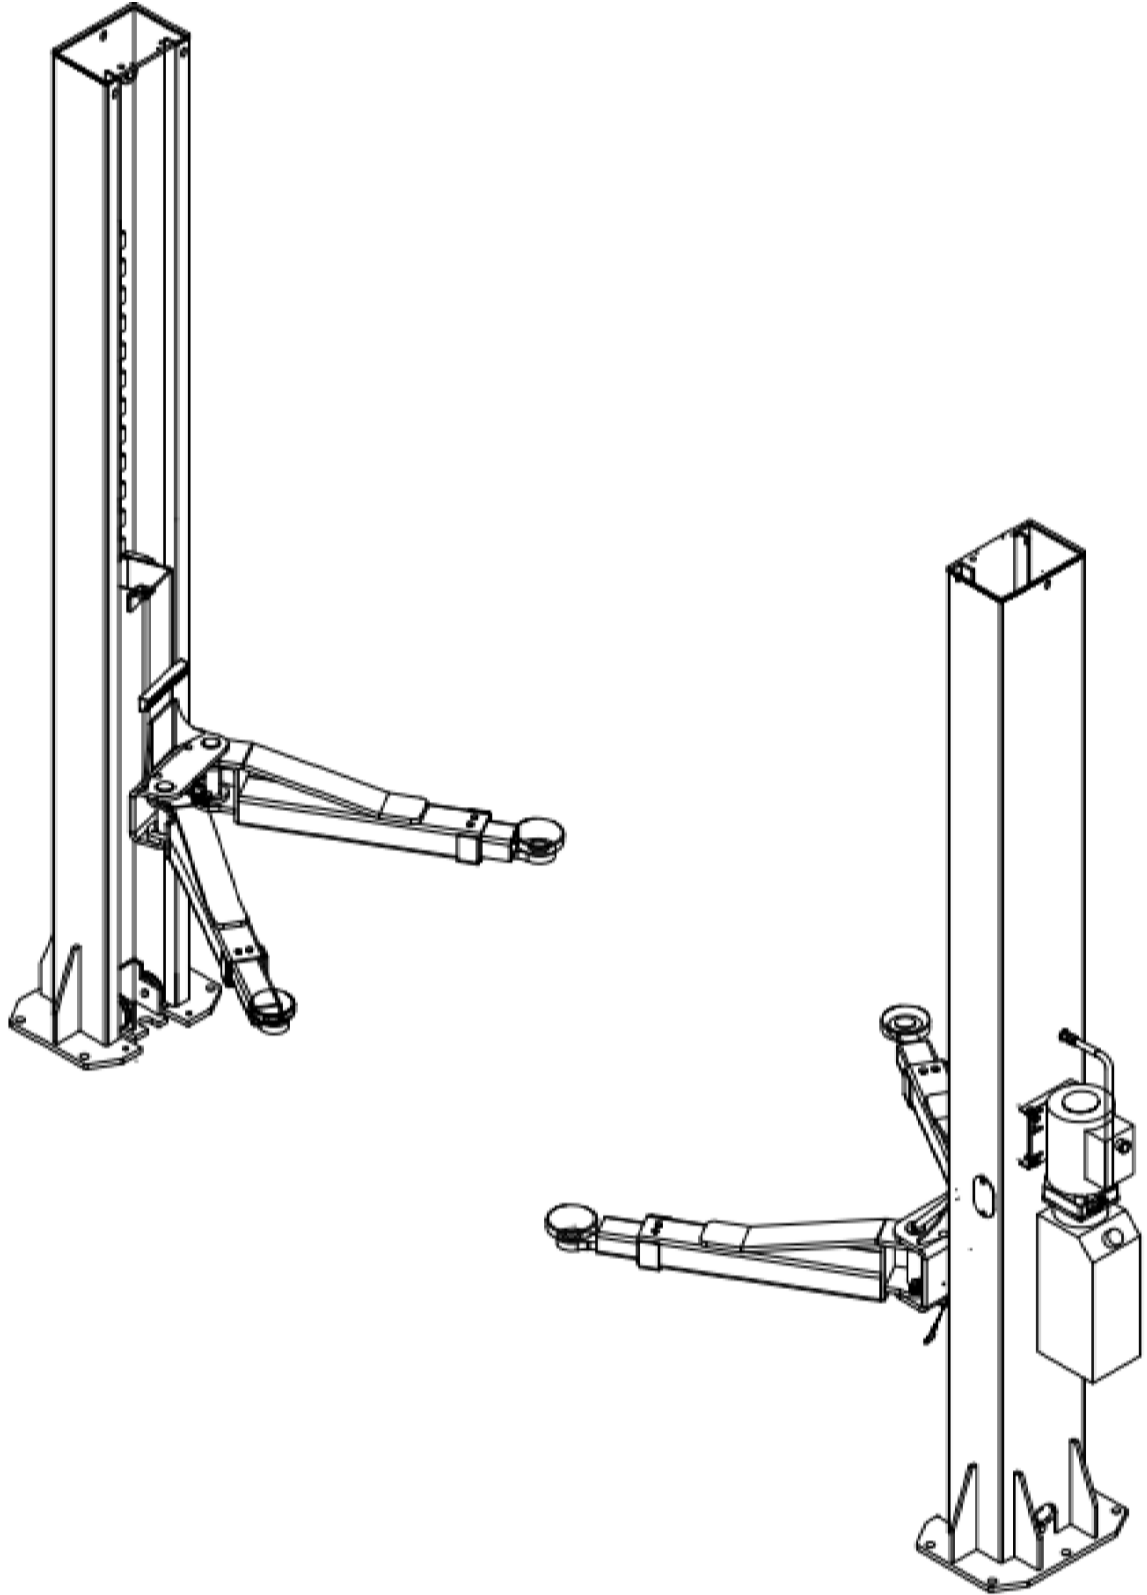

INSTALLATION & OPERATION MANUAL

TABLE OF CONTENTS

• IMPORTANT INFORMATION.....	2
• GENERAL LIFT INFORMATION / FEATURES	2
• LIFT SPECIFICATIONS	3
• LIFT AREA LAYOUT INFORMATION.....	5
• FOUNDATION and ANCHORING REQUIREMENTS	6
• TOOLS and EQUIPMENT REQUIRED for INSTALL.....	7
• INSTALLATION PROCEDURE.....	7
• LIFT OPERATION.....	13
• SAFETY PROCEDURES.....	14
• PREVENTIVE MAINTENANCE SCHEDULE	14
• TROUBLESHOOTING.....	16
• ILLUSTRATED PARTS BREAKDOWN	17
• PARTS LIST.....	18

IMPORTANT INFORMATION

Two Post Lifts

1. Any freight damage must be noted on the freight bill before signing and reported to the freight carrier with a freight claim established. Identify the components and check for shortages. If shortages are discovered, please contact the Distributor / Sales Rep. in your area for service.
2. Consult building owner and / or architect's plans when applicable to establish the best lift location. The lift should be located on a relatively level floor with 4 in. minimum thickness, 3000-psi concrete slab that has been properly cured. There can be no cracks in the slab within 36 in. of the base plate location, and no seams in the foundation within 6 in. of its location! Remember: any structure is only as strong as the foundation on which it is located!

IMPORTANT! Make sure you have extra help or heavy-duty lifting equipment when unloading and assembling the lift.

3. Please read the safety procedures and operating instructions in this manual before operating lift. Keep this manual near lift at all times. Make sure all operators read this manual.
4. The lift should be located on a relatively level floor of less than 3 degrees slope. If slope is questionable, consider a survey of the site and/or the possibility of pouring a new level concrete slab.
5. Make sure you have enough area and ceiling height to install lift. (See Lift Specifications)
6. Never raise a car until you have double checked all bolts, nuts and hose fittings.

7. Always lower the lift onto the locks before going under the vehicle.
Never allow anyone to go under the lift when raising or lowering.

This is a vehicle lift installation/operation manual and no attempt is made or implied herein to instruct the user in lifting methods particular to an individual application. Rather, the contents of this manual are intended as a basis for operation and maintenance of the unit as it stands alone or as it is intended and anticipated to be used in conjunction with other equipment.

Proper application of the equipment described herein is limited to the parameters detailed in the specifications and the uses set forth in the descriptive passages. Any other proposed application of this equipment should be documented and submitted in writing to the factory for examination. The user assumes full responsibility for any equipment damage, personal injury, or alteration of the equipment described in this manual or any subsequent damages.

CAUTION!

!

ENSURE THAT ALL CABLE SHEAVES, BEARINGS, AND SHAFTS ARE SUFFICIENTLY LUBRICATED. ALSO, THE CORNERS OF EACH COLUMN SHOULD BE LIGHTLY GREASED WITH QUALITY TYPE RED LITHIUM GREASE PRIOR TO OPERATING THE LIFT. LUBRICATE ALL ON AN ANNUAL BASIS.

Motors and all electrical components are not sealed against the weather and moisture. Install this lift in a protected indoor location. Failure by the owner to provide the recommended shelter could result in unsatisfactory lift performance, property damage, or personal injury.

This lift is a 9,000 lb. capacity, 2-Post Lifts. The locking latch system is very similar to an extension ladder. The locking latch is in contact with the latch rack. As the lift rises the locking latch drops into place. The locking latch engages in latch rack in 3" increments starting at about 16" from the ground. The locking latches must be manually disengaged for the lift to lower. The locking latch is released by pulling the Release Cable raising the latch up off the latch rack. Once the raise button is pressed, the latch will automatically reengage after approximately 3" of travel. Heavy bearings and heavy-duty leaf chains are used throughout the lift. The work is done with the heavy-duty chain connected to a 2-1/2" cylinder, driven by an electric / hydraulic pump.


LIFT SPECIFICATIONS

Capacity	9,000 lbs.
Rise Time	50 Seconds
Overall Height	111-1/2"
Overall Floor Width	134-1/2"
Maximum Lift Height	80-3/4"
Minimum Pad Height	4"
Between Columns	111-3/8"
Column Size	7-1/4" x 11-1/8"
Drive Thru	99-1/2"
Base Plate Width	9-1/8"
Motor	2HP, 220 Volt, 1PH

LIFT AREA LAYOUT INFORMATION

FLOOR PLATE MODEL


(Symmetrical Arm configuration)

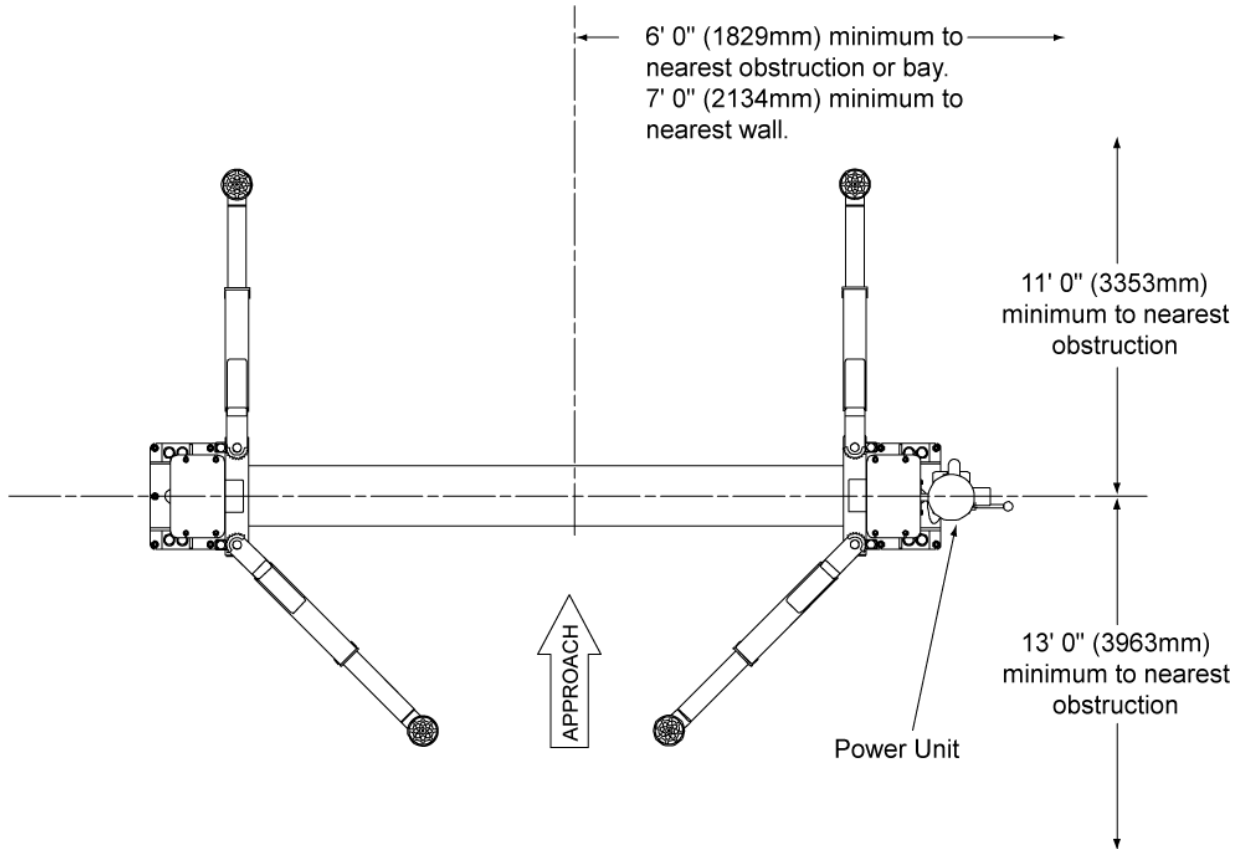

NOTE: Lift can be installed so power unit column can be located on either side. However, to save operation steps it is recommended that it is placed on passenger side of lift.

FOUNDATION and ANCHORING REQUIREMENTS

- Concrete shall have compression strength of at least 3,000 PSI and a minimum thickness of 4" to achieve a minimum anchor embedment of 3 1/4". NOTE: When using the standard supplied 3/4" x 5 1/2" long anchors, if the top of the anchor exceeds 2 1/4" above the floor grade, you DO NOT have enough embedment.
- Maintain a 6" minimum distance from any slab edge or seam. Hole to hole spacing should be a minimum 6 1/2" in any direction. Hole depth should be a minimum of 4".
- DO NOT install on asphalt or another similar unstable surface. Columns are supported only by anchoring to floor.
- Using the horseshoe shims provided, shim each column base as required until each column is plumb. If one column must be elevated to match the plane of the other column, full size base shim plates should be used. Torque anchors to 85 ft-lbs. Shim thickness MUST NOT exceed 1/2" when using the 5 1/2" long anchors provided with the lift. Adjust the column extensions plumb.
- If anchors do not tighten to 85 ft-lbs. installation torque, replace the concrete under each column base with a 4' x 4' x 12" thick 3,000 PSI minimum concrete pad keyed under and flush with the top of existing floor. Allow concrete to cure before installing lifts and anchors (typically 2 to 3 weeks).

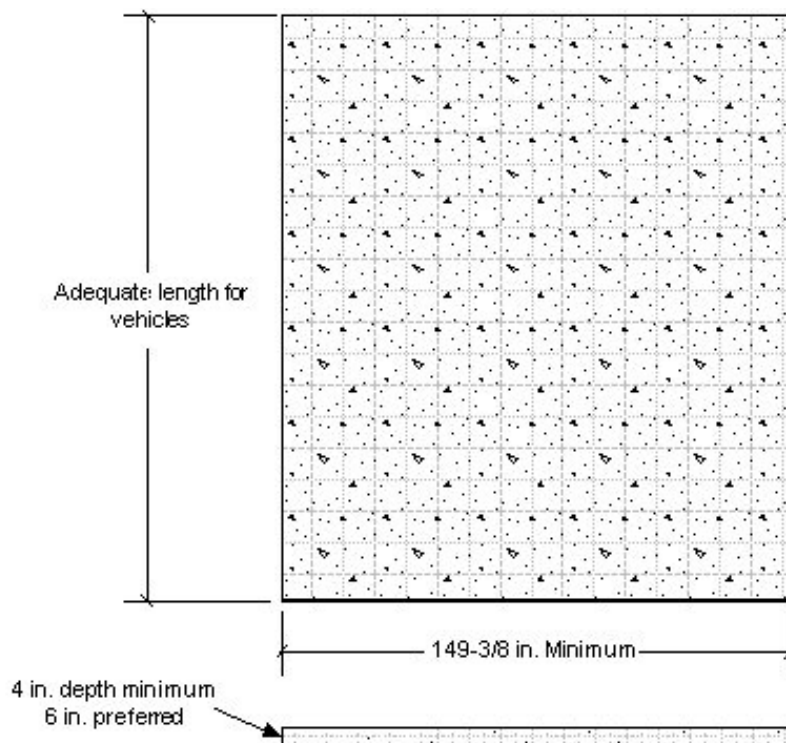

TOOLS REQUIRED FOR INSTALL

The installation of this lift is relatively simple and can be accomplished by two men in a few hours.

The following tools and equipment are needed:

- Hoist or Forklift (optional)
- ISO 32 Light Hydraulic Oil (approx. 12 quarts)
- Tape Measure
- 4' Level
- Rotary Hammer Drill with 3/4 in. Drill Bit (Core Drill Rebar Cutter recommended)
- Metric Sockets and Open Wrench set
- Vise grips
- 8mm Socket Head Wrench
- Torque wrench with 1-1/8" socket for anchors
- Teflon Tape

INSTALLATION PROCEDURE

STEP 1. After unloading the lift, place it near the intended installation location.

STEP 2. Remove the shipping bands and packing materials from the unit.

The Power Unit will be unpacked from the top. **NOTE:** Be careful not to drop power unit.


STEP 3. Remove the packing brackets and bolts holding the two columns together (do not discard bolts; they are used in the assembly of the lift).

STEP 4. Once the power unit column location is decided, ensure that the proper lift placement is observed


from walls and obstacles. Also check the ceiling height for clearance in this location.

NOTE: the power unit column can be located on either side. It is helpful to try and locate the power side


with the passenger side of the vehicle when loaded on the lift to save steps during operation.

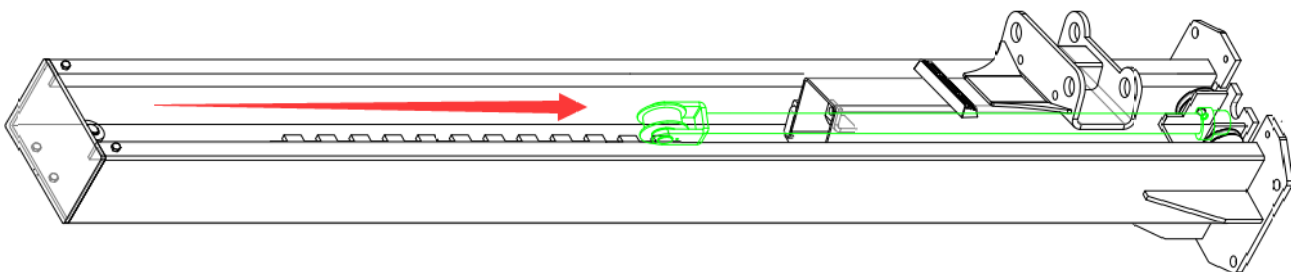

STEP 5 Install the hardware into top plate onto the top of the columns.

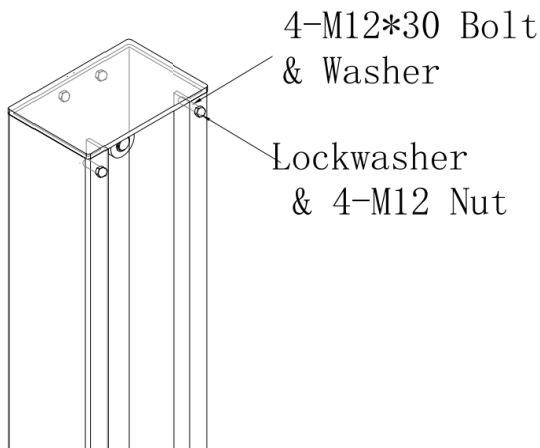

STEP 6. Position the columns facing each other 133-1/2" outside base plates.
Square the columns by measuring diagonally from corner points on base plates (within 1/4").

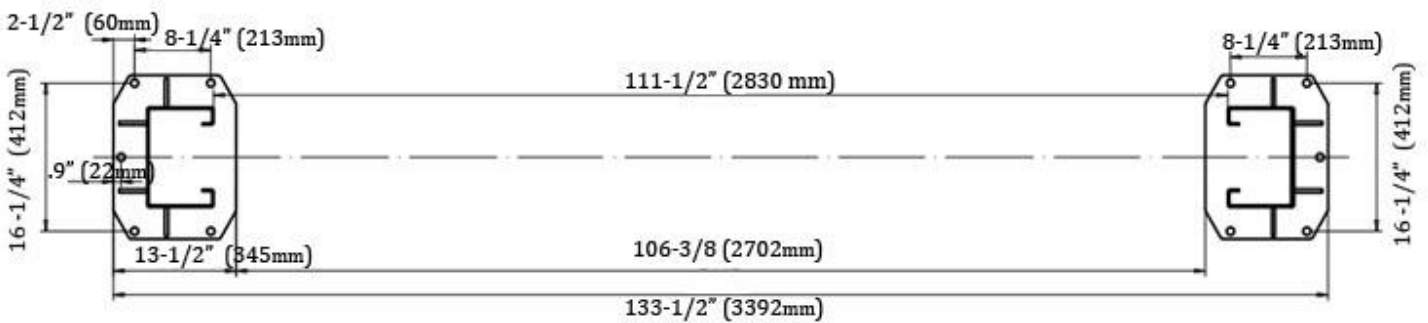

STEP 7. Use the existing holes in column base plate as a guide for drilling the 3/4" diameter holes into the concrete. Drill the anchor holes only for ONE column, installing anchors as you go. You will install anchors in second column after the cables, hoses, and floorplate are installed.

NOTE: Drilling thru concrete slab (recommended) will allow the anchor to be driven thru the bottom of slab,

This helps incase the threads are damaged or if the lift will need to be relocated.

CAUTION!


!

Anchors must be at least 6" from the edge of the slab or any seam.

1. Use a concrete hammer drill with a carbide tip, solid drill bit the same diameter as the anchor, 3/4". (.775 to .787 inches diameter). Do not use excessively worn bits or bits which have been incorrectly sharpened.
2. Keep the drill in a perpendicular line while drilling.
3. Let the drill do the work. Do not apply excessive pressure.
Lift the drill up and down occasionally to remove residue to reduce binding.
4. Drill the hole to depth equal to the length of anchor.
Note: Drilling thru concrete (recommended) will allow the anchor to be driven thru the bottom of foundation. This helps incase the threads are damaged or if the lift will need to be relocated.
5. For better holding power blow dust from the hole.

Place a flat washer and hex nut over threaded end of anchor, leaving approximately 1/2" of thread exposed carefully tap anchor.

Do not damage threads. Tap anchor into the concrete until nut and flat washer are against base plate. Do not use an impact wrench to tighten! Tighten the nut, two or three turns on average concrete (28-day cure). If the concrete is very hard only one or two turns may be required. Check each anchor bolt with torque wrench set to 85 foot pounds.

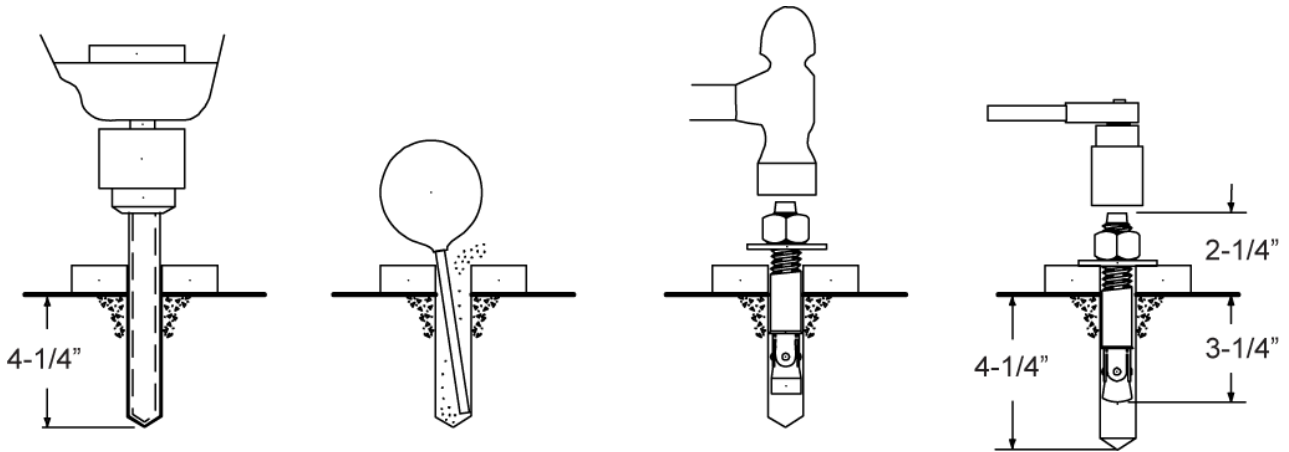

Drill holes using 3/4" carbide tipped masonry drill bit per ANSI standard B94.12.1977


Clean hole.

Run nut down just below impact section of bolt. Drive anchor into hole until nut and washer contact base.


Tighten nut with Torque wrench to 85 ft.-lbs.

- STEP 9.** using a level, check column for side-to-side plumb and front-to-back plumb. If needed, use horseshoe shims provided by placing shims underneath the base plate and around the anchor bolt. This will prevent bending the column bottom plates (Shim thickness should not exceed 1/2"). Tighten 3/4" anchor bolts to 85 ft.-lbs. of torque.
- STEP 10.** Using a tape measure, measure from corner of the base on main side column to the opposite corner of the offside column to insure legs are square (within a 1/4").
- STEP 11.** Set carriages on the first safety latch engagement. Be sure each carriage is at the same height by measuring from the top of the base to the bottom of the carriage (double check the latches before working under the carriages). This dimension should be within 1/4".
- STEP 12.** Installing the equalizing cables: for general cable arrangement. Route the first cable as shown on next page. Tighten nut on one cable stud so that the end of stud passes the nylon on the nut. Pull the other end of cable and run nut on it. Repeat above for second cable.


NOTE: DO NOT tighten cables at this time. Just start them on the threads. Other column will be anchored in later steps. If you tighten cables at this time you will pull the column and be unable to properly level/shim it for anchor installation.

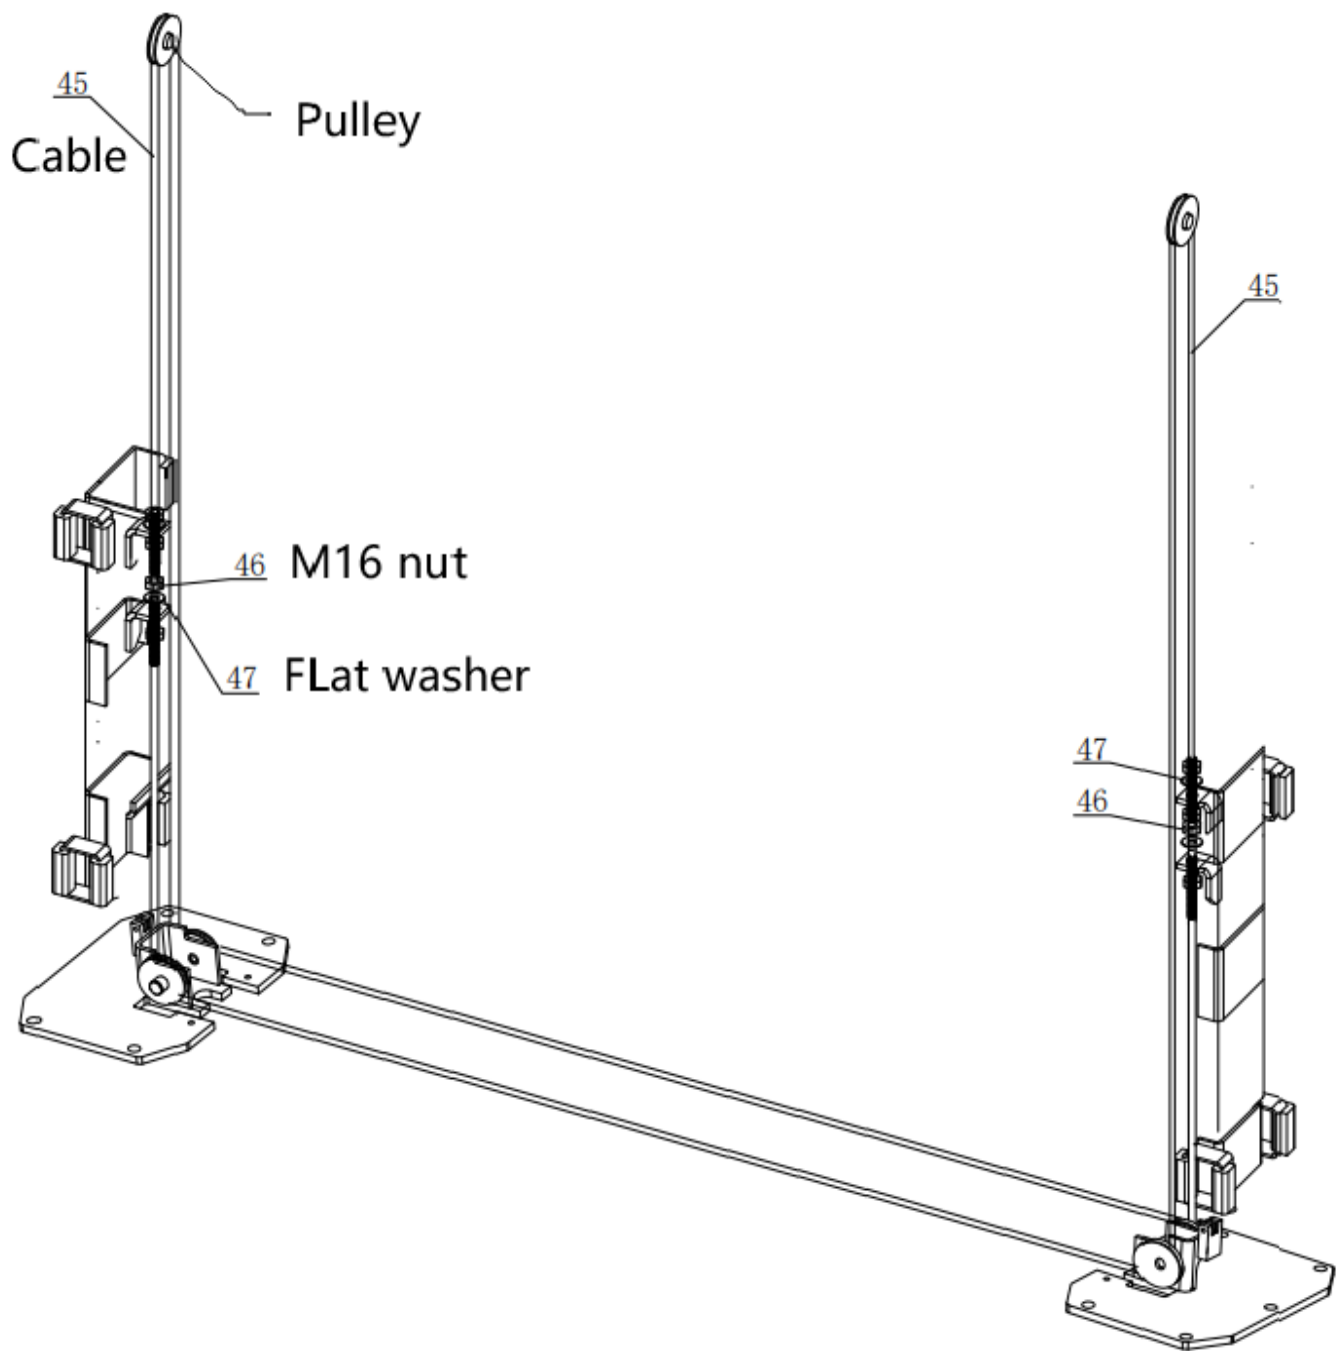

 
Cylinder centering and chain installation: Make sure the "Tip" on the bottom of the cylinder is properly located into the center hole on top of the cylinder mount in base. Pull the pre-attached leaf chain in both sides up and over the chain sheave on top of the cylinders.

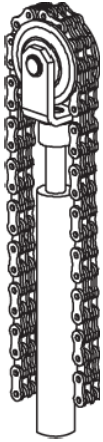


STEP 13. Connect the Hydraulic Hoses and Fittings, as shown.

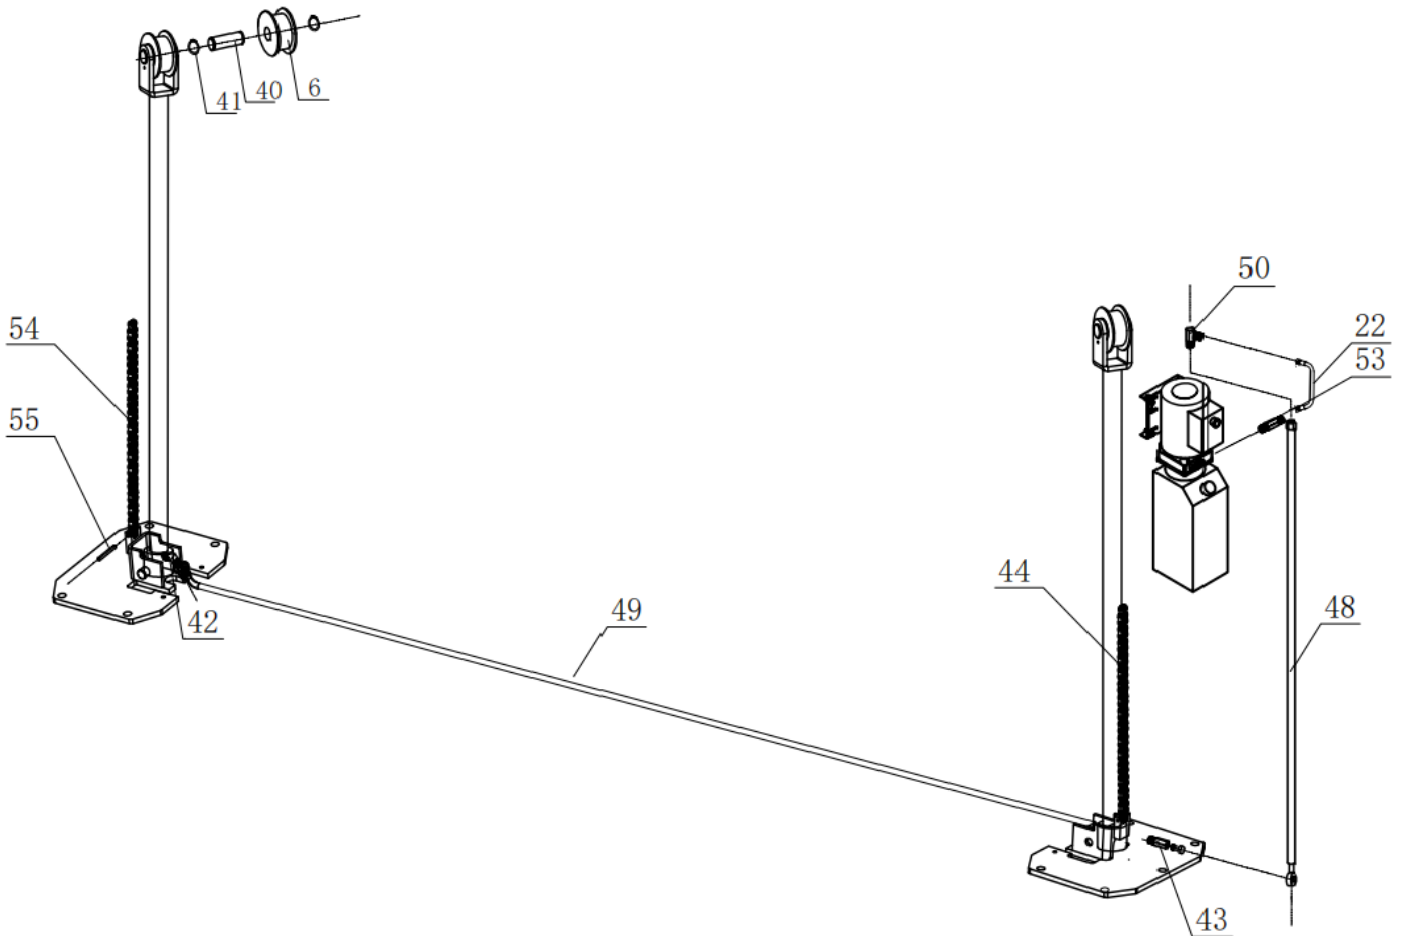

Mount the Power Unit on lift as shown.

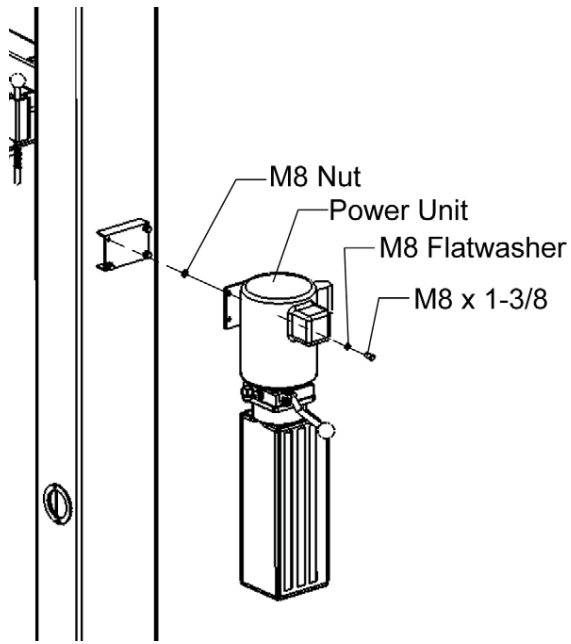

STEP 14. Mount the Floor Plate as shown below.

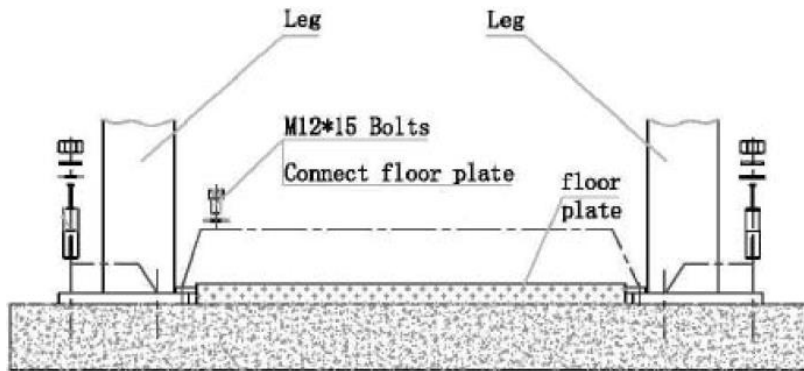

STEP 15. Install remaining anchors at this point using directions from page 10.

*STEP 16 Pre-install the arm restraint gears to the arm using the supplied hardware (M10*16 HEXAGON SOCKET SCREW)*

STEP 17. Install the swing arms on the carriages using the included 1-1/2" diameter pins. Check for proper engagement of the arm lock – the rack on the lock should fully engage the gear on the arm. Note you may have to loosen the arm lock bolts to get proper engagement and to install the arm pins. BE SURE to retighten the lock bolts after the arm pins are installed.

STEP 18. Adjust the carriage cables tension. Adjust each cable to approximately 1/2" side-topside play. Check the latch releases to insure the carriage is still sitting on the appropriate latch.

STEP 19. Remove the vent plug from the power unit and fill the reservoir. Use a Ten Weight (ISO AW32) non-foaming, non-detergent hydraulic fluid (i.e. Texaco HD32 or equal). The unit will hold approximately twelve quarts of fluid.

STEP 20. Make the Electrical hookup to the power unit; 220V Single Phase. It is recommended that a 220 Volt, 30 Amp twist lock plug be installed in the power line just ahead of the power unit. Use wire capable of supporting a 30-amp circuit

Warning: the wiring must comply with local code. Have a certified electrician make the electrical hook-up to the power unit. Protect each circuit with time delay fuse or circuit breaker; 208v-230v single phase 60 Hz 30 amp.

STEP 21. Do not place any vehicle on the lift at this time. Cycle the lift up and down several times to insure latches click together and all air is removed from the system. To lower the lift, both latch releases must be manually released. Latches will automatically reset once the lift ascends approximately 17" from base. If latches click out of sync, tighten the cable on the one that clicks first.

STEP 21. With lift fully lowered, recheck power unit fluid level. Fill as required.

SAFETY AND OPERATING INSTRUCTIONS

Only authorized personnel are to operate lift

Read operating and safety procedures manual completely before operating lift.

- *Properly maintain and inspect lift in accordance to owner's manual.*
- *Do not operate a lift that is damaged or in need of repair.*
- *Allow only authorized personnel in the lift bay.*
- *Stay clear of Lift when raising or lowering (NO RIDERS)*
- *Keep hands and feet away from pinch points at all times.*
- *Never override the Lifts operating and safety controls.*
- *If a vehicle is suspected of falling, clear area immediately.*
- *Do not rock vehicle while positioned on lift.*
- *Always use safety jack stands when removing or installing heavy components.*

Vehicle Loading

- *Position vehicle for proper weight distribution (center of gravity should be midway between adapters).*
- *Swing arms under vehicle to allow adapters to contact at the manufacturer's recommended pick up points.*
- *Use caution before lifting pickup trucks, SUV's and other framed vehicles. The individual axle weight capacity should not exceed 1/2 of lift capacity.*
- *Make sure vehicle is neither front nor rear heavy.*
- *Make sure the lifting pads are in a proper and safe position to support the vehicle. (Ref: Lifting Points Guide and decal on Main side column for typical arm positioning)*


Raising Lift

- *Push Up switch to raise lift (make sure arm restraints engage or stop and slightly move arm to allow gear to mesh) until tires clear floor.*
- *Stop and check for secure contact on adapters and vehicle weight distribution. If secure raise to desired height.*
- *ALWAYS lower the lift into the nearest lock position by pressing the lower lever to relieve the hydraulic pressure and let the latch set right in a lock position.*
- *Never work under a lift that is not in the locked position.*

Lowering Lift

- *Clear all obstacles from under lift and vehicle and ensure only the lift operator is in the lift area.*
- *Stay clear of lift and raise the lift off the safety locks.*
- *Pull safety latch releases and press the lower lever to begin descent.*

- Unload lift by first completely lowering lift, then swinging arms to drive-thru position before moving vehicle.

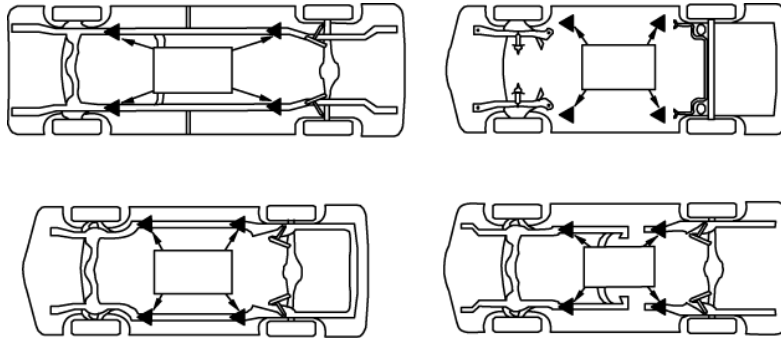

Lift Points Note:

Refer to the manufacturer's specific vehicle lifting points. Some vehicles display these points on a label inside the right front door lock face or are identified by triangle shape marks on the vehicle's undercarriage, reference SAE J2184.

SAFETY PROCEDURES

- Never allow unauthorized persons to operate lift. Thoroughly train new employees in the use and care of lift.
- Caution – the power unit operates at high pressure.
- Remove passengers before raising vehicle.
- Prohibit unauthorized persons from being in shop area while lift is in use.
- Total lift capacity is 9,000 lbs. @ 2,250 lbs per lifting pad. Do not exceed maximum weight capacity of lift.
- Prior to lifting vehicle, walk around the lift and check for any objects that might interfere with the operation of lift and safety latches; tools, air hoses, shop equipment.
- When approaching the lift with a vehicle, make sure to center the vehicle between the columns so that the tires will clear the swing arms easily. Slowly drive the vehicle between the columns. It is recommended to have someone outside the vehicle guide the driver.
- Always lift vehicle using all four pads.
- Never use lift to raise one end or side of vehicle.
- Always raise vehicle about 3” and check stability by rocking vehicle.
- Prior to lowering vehicle, walk around the lift and check for any objects that might interfere with the operation of lift and safety latches; tools, air hoses, shop equipment.
- Always lower lift to the lock position before going under vehicle.
Never allow anyone to go under the lift when raising or lowering.

PREVENTIVE MAINTENANCE SCHEDULE

The periodic Preventive Maintenance Schedule given is the suggested minimum requirements and minimum intervals; accumulated hours or monthly period, whichever ever comes sooner. Periodic maintenance is to be performed on a daily, weekly, and yearly basis as given in the following paragraphs.

WARNING

!!

Occupational Safety and Health Administration (OSHA) and the American National Standards Institute (ANSI) requires users to inspect lifting equipment at the start of every shift. These and other periodic inspections are the responsibility of the user.

Failure to perform the daily pre-operational check can result in expensive property damage, lost production time, serious personal injury, and even death. The safety latch system must be checked and working properly before the lift is put to use.

Failure to heed this warning can result in death or serious injury, or damage to equipment. If you hear a noise not associated with normal lift operation, or, if there is any indications of impending lift failure – CEASE OPERATION IMMEDIATELY! – Inspect, correct and/or replace parts as required.

Daily Pre-Operation Check (8-Hours)

1. Check safety lock audibly and visually while in operation
2. Check safety latches for free movement and full engagement with rack.
3. Check hydraulic connections, and hoses for leakage.
4. Check chain connections – bends, cracks–and loose links.
5. Check cable connections– bends, cracks–and looseness.
6. Check for frayed cables in both raised and lowered position.
7. Check snap rings at all rollers and sheaves.
8. Check bolts, nuts, and screws and tighten if needed.
9. Check wiring & switches for damage.
10. Keep base plate free of dirt, grease or any other corrosive substances.
11. Check floor for stress cracks near anchor bolts.
12. Check swing arm restraints.

Weekly Maintenance (every 40-Hours)

1. Check anchor bolts torque to 85 ft-lbs for the $\frac{3}{4}$ in. anchor bolts. Do not use an impact wrench to tighten anchor bolts.
2. Check floor for stress cracks near anchor bolts.
3. Check hydraulic oil level.
4. Check and tighten bolts, nuts, and screws.
5. Check cylinder pulley assembly for free movement or excessive wear on cylinder yoke or pulley pin.
6. Check cable pulley for free movement and excessive wear.

Yearly Maintenance

1. Lubricate chains
2. Grease rub blocks and column surface contacting rub blocks
1. Change the hydraulic fluid – good maintenance procedure makes it mandatory to keep hydraulic fluid clean. No hard fast rules can be established; – operating temperature, type of service, contamination levels, filtration, and chemical composition of fluid should be considered. If operating in dusty environment shorter interval may be required.

Special Maintenance Tasks

NOTE: The following items should only be performed by a trained maintenance expert:

- *Replacement of hydraulic hoses.*
- *Replacement of chains and rollers.*
- *Replacement of cables and sheaves.*
- *Replacement or rebuilding air and hydraulic cylinders as required.*
- *Replacement or rebuilding pumps / motors as required.*
- *Checking of hydraulic cylinder rod and rod end (threads) for deformation or damage.*

CAUTION!

!

Relocating or changing components may cause problems. Each component in the system must be compatible; an undersized or restricted line will cause a drop in pressure. All valve, pump, and hose connections should be sealed and/or capped until just prior to use. Air hoses can be used to clean fittings and other components. Most important is cleanliness; Contamination is the most frequent cause of malfunction or failure of hydraulic equipment.


TROUBLESHOOTING

The common problems that may be encountered and their probable causes are covered in the following paragraphs:

PROBLEM	SOLUTION
Motor Does Not Operate	<p>Failure of the motor to operate is normally caused by one of the following:</p> <ol style="list-style-type: none"> 1. Breaker or fuse blown. 2. Faulty wiring connections; call electrician. 3. Defective up button; call electrician for service.
Motor Functions but Lift Will Not Rise	<p>If the motor is functioning, but the lift will not rise do the following in the order given:</p> <ol style="list-style-type: none"> 1. A piece of trash is under check valve. Push handle down and push the up button at the same time. Hold for 10-15 seconds. This should flush the system. 2. Check the clearance between the plunger valve of the lowering handle. There should be 1/16" clearance. 3. Remove the check valve cover and clean ball and seat. <div style="background-color: black; color: white; padding: 5px; text-align: center; margin: 10px 0;"> <p>WARNING !!</p> </div> <p>Failure to properly relieve pressure in the following step can cause injury to personnel.</p> <p>This lift uses ISO Grade 32 or other good grade non-detergent hydraulic oil at a high hydraulic pressure. Be familiar with its toxicological properties, precautionary measures to take, and first aid measures as stated in the Safety Summary before performing any maintenance with the hydraulic system.</p> <ol style="list-style-type: none"> 4. Oil level too low. Oil level should be just under the vent cap port when the lift is down. Relieve all hydraulic pressure and add oil as required.
Oil Blows out Breather of Power Unit	<p>If oil blows out of the breather of the power unit, take the following actions:</p> <ol style="list-style-type: none"> 1. Oil reservoir overfilled. Relieve all pressure and siphon out hydraulic fluid until at a proper level 2. Lift lowered too quickly while under a heavy load. Lower the lift slowly under heavy loads.
Motor Hums and Will Not Run	<p>If the motor hums but fails to run, take the following actions:</p> <ol style="list-style-type: none"> 1. Lift overloaded. Remove excessive weight from lift

	<p style="text-align: center;">WARNING</p> <p style="text-align: center;">!!</p> <p>The voltages used in the lift can cause death or injury to personnel. In the following steps, make sure that a qualified electrician is used to perform maintenance</p> <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">2. Faulty wiring</td> <td style="width: 50%;">Call electrician</td> </tr> <tr> <td>3. Bad capacitor</td> <td>Call electrician</td> </tr> <tr> <td>4. Low voltage</td> <td>Call electrician</td> </tr> </table>	2. Faulty wiring	Call electrician	3. Bad capacitor	Call electrician	4. Low voltage	Call electrician
2. Faulty wiring	Call electrician						
3. Bad capacitor	Call electrician						
4. Low voltage	Call electrician						
Lift Jerks Going Up and Down	<ol style="list-style-type: none"> 1. If the lift jerks while going up and down, it is usually a sign of air in the hydraulic system. Raise lift all the way to top and return to floor. Repeat 4-6 times. Do not let this overheat power unit. 						
Oil Leaks	<p>Oil leak causes at the power unit and cylinders are normally caused by the following:</p> <ol style="list-style-type: none"> 1. Power unit: if the power unit leaks hydraulic oil around the tank-mounting flange check the oil level in the tank. The level should be two inches below the flange of the tank. A screwdriver can be used as a "dipstick". 2. Cylinder - Piston Rod: the rod seal of the cylinder is out. Rebuild or replace the cylinder. 3. Cylinder - Vent: the piston seal of the cylinder is out. Rebuild or replace the cylinder. 						
Lift makes excessive noise / vibrates	<p>Excessive noise from the lift is normally caused by the following:</p> <ol style="list-style-type: none"> 1. Carrige is rubbing the columns. Readjustment needed. 2. Cylinder too tight, load lift half capacity and cycle up and down a few times to break in. Lift cylinder should quiet down with use. If not Oil Additive by CAT part # 1u9891 is recommended. 3. May have excessive wear on cable sheaves or shafts. Replace them. 						

ILLUSTRATED PARTS BREAKDOWN

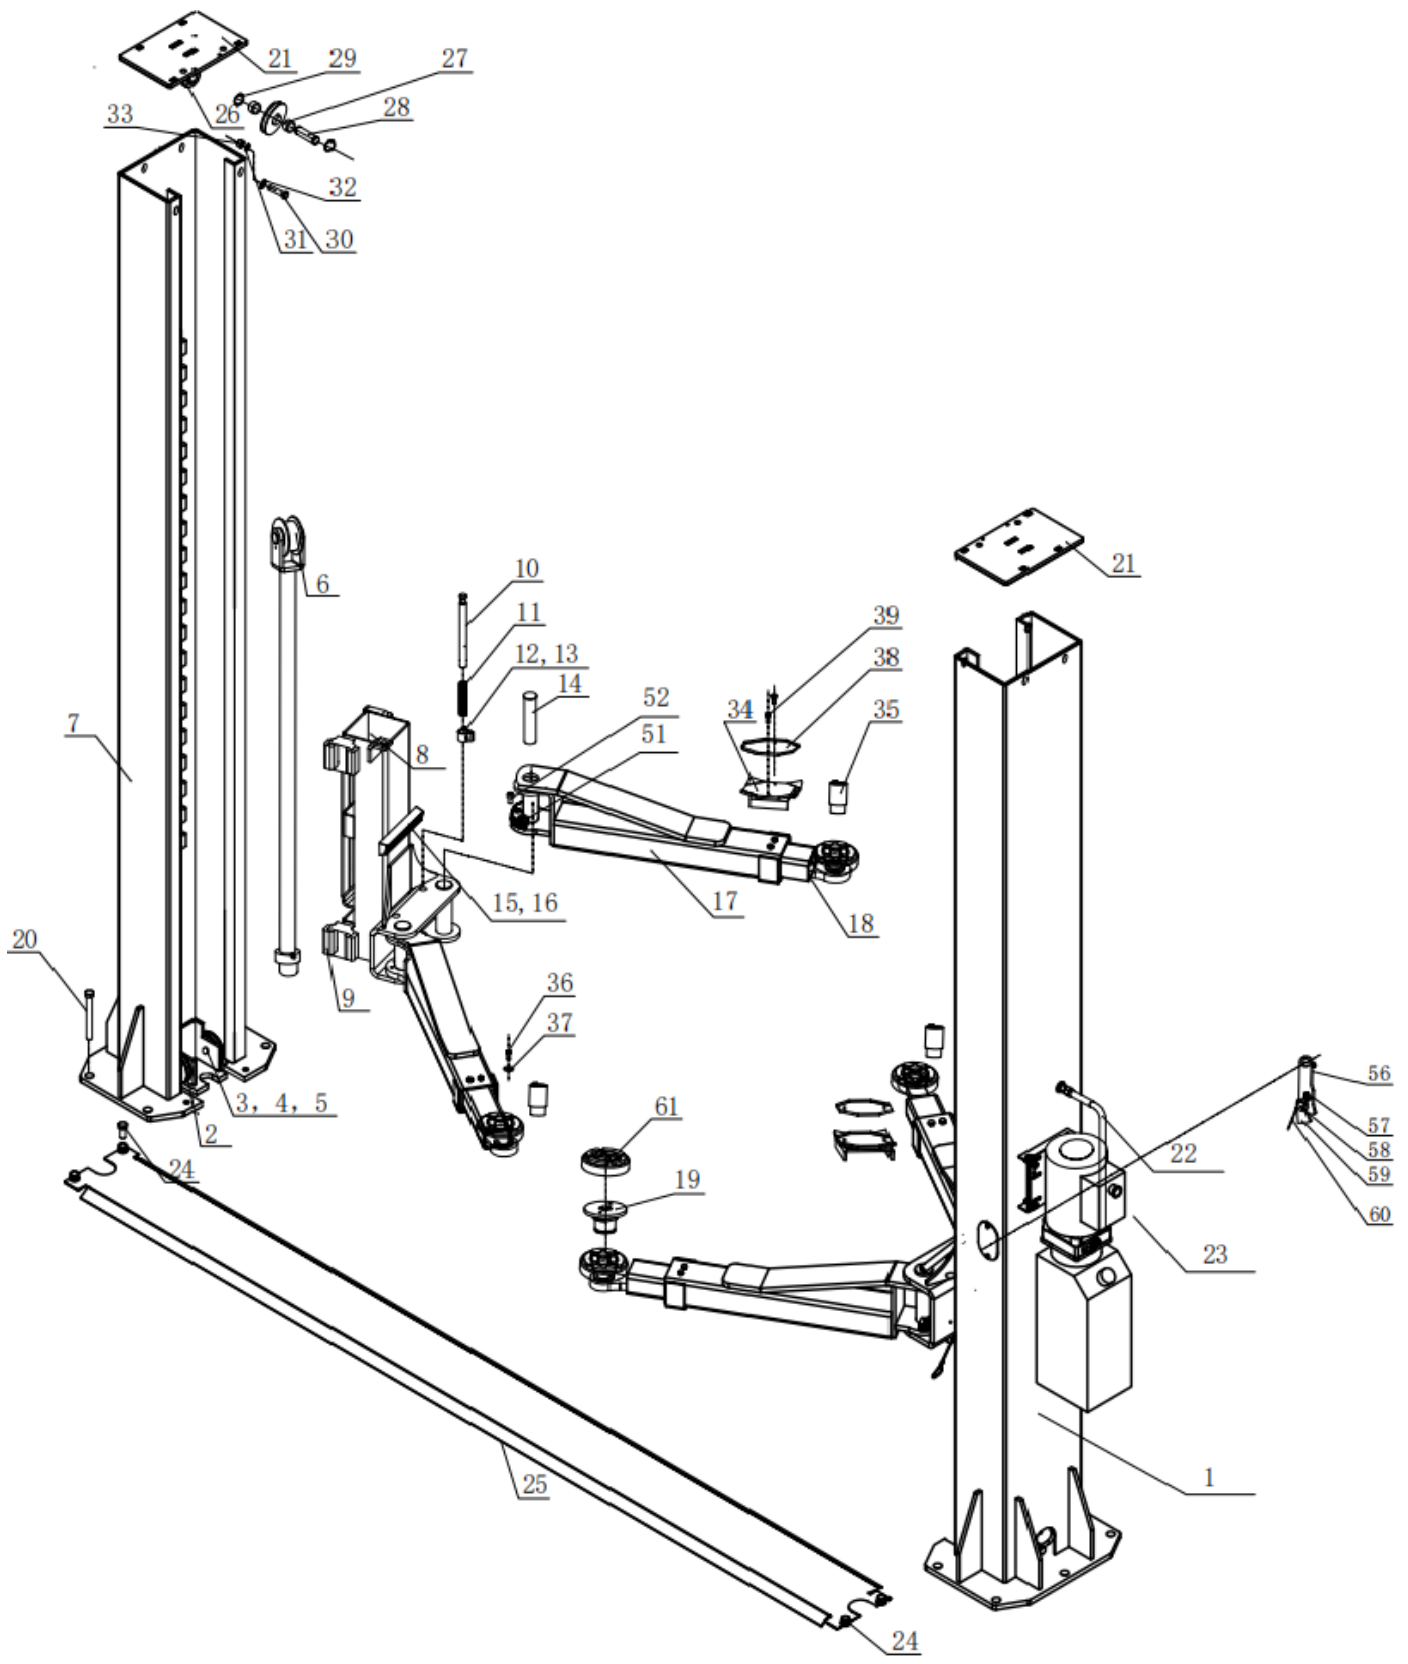

PARTS LIST OF BP LIFT

NW-2-9KFP PARTS LIST				
ITEM	DESCRIPTIONS	TYPE	QTY	UNIT
1	MASTER COLUMN WELDED GROUP		1	PC
2	BOTTOM CABLE PULLEY		4	PC
3	CABLE PULLEY BEARING		6	PC
4	FLAT WASHER		2	PC
5	φ25 JUMP RING	φ25	6	PC
6	CHAIN WHEEL WITH BEARING		2	PC
7	SLAVE COLUMN WELDED GROUP		1	PC
8	CARRIAGE		2	PC
9	SLIDING BLOCK		16	PC
10	ARM LOCK SHAFT		4	PC
11	SPRING		4	PC
12	SMALL GEAR		4	PC
13	φ5*35 COTTER PIN	φ5*35	4	PC
14	ARM PIN		4	PC
15	DOORSTOP RUBBER STRIP		2	PC
16	CROSS SCREW	M8*20	4	PC
17	ARM OUTER TUBE WELDING		4	PC
18	ARM INNER TUBE WELDING		4	PC
19	SCREW TRAY ASSEMBLY		4	PC
20	3/4"* 5 1/2" ANCHOR BOLT	3/4"* 5 1/2"	10	SET

21	TOP CAP		2	PC
22	SHORT TUBING ON THE POWER UNIT		1	PC
23	POWER UNIT		1	PC
24	M12*20 HEXAGON BOLT	M12*20	4	PC
25	PATTERN BASE		1	PC
26	UPPER CABLE PULLEY		2	PC
27	SPACER BUSH		4	PC
28	UPPER PULLEY SHAFT		2	PC
29	∅25 JUMP RING	∅25	4	PC
30	M12*35 HEXAGON BOLT	M12*35	8	PC
31	∅12 FLAT WASHER	∅12	8	PC
32	∅12 SPRING WASHER	∅12	8	PC
33	M12 NUT	M12	8	PC
34	SLIDING BLOCK		2	PC
35A	65MM SHORT ADAPTER		4	PC
35B	130MM LONG ADAPTER		4	PC
36	HEX SOCKET PAN HEAD SCREW	M8*12	8	PC
37	∅8 LOCK WASHER	∅8	8	PC
38	OCTAGON RUBBER PAD		2	PC
39	CROSS RECESS PAN HEAD SCREW	M6*12	4	PC
40	CHAIN WHEEL SHAFT		2	PC
41	∅25 JUMP RING	∅25	4	PC
42	45 DEGREE TUBING CONNECTOR		2	PC

43	COMBINATION TUBING CONNECTOR ON CYLINDER		2	SET
44	HYDRAULIC CYLINDER		2	PC
45	∅8 CABLE		2	PC
46	CABLE NUT	M16	8	PC
47	CABLE FLAT WASHER	φ16	4	PC
48	TUBING FROM MAIN CYLINDER TO THE MASTER COLUMN CONNECTOR		1	PC
49	TUBING UNDER THE PATTERN BASE		1	PC
50	90 DEGREE FITTING ON THE MAIN COLUMN		1	PC
51	SEMICIRCULAR TOOTH BLOCK		4	PC
52	M10*16 HEXAGON SOCKET SCREW	M10*16	12	PC
53	TUBING CONNECTOR ON THE POWER UNIT		1	PC
54	CHAIN		2	PC
55	CHAIN PIN		4	PC
56	LOCK BLOCK ASSEMBLY		2	SET
57	M6*35 CROSS SCREW	M6*35	2	PC
58	φ10*30 SHAFT	φ10*30	2	PC
59	LOCK LIMIT BLOCK		2	PC
60	φ2.5*650MM LOCK CABLE	φ2.5*650	2	PC
61	ROUND RUBBER PAD		4	PC

This item is warranted for two (2) years on structural components and one (1) year on hydraulic power units, pneumatic power units, cylinders and major components from date of invoice. Wear items are covered by a 90 day warranty.

This LIMITED warranty policy does **not include a labor** warranty.

NOTE: ALL WARRANTY CLAIMS MUST BE PRE-APPROVED BY THE MANUFACTURER TO BE VALID.

The Manufacturer shall repair or replace at their option for this period those parts returned to the factory freight prepaid, which prove after inspection to be defective. This warranty will not apply unless the product is installed, used and maintained in accordance with the Manufacturers installation, operation and maintenance instructions.

This warranty applies to the ORIGINAL purchaser only, and is non-transferable. The warranty covers the products to be free of defects in material and workmanship but, does not cover normal maintenance or adjustments, damage or malfunction caused by: improper handling, installation, abuse, misuse, negligence, carelessness of operation or normal wear and tear. In addition, this warranty does not cover equipment when repairs or alterations have been made or attempted to the Manufacturer's products.

THIS WARRANTY IS EXCLUSIVE AND IS LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OR MERCHANTABILITY OR ANY IMPLIED WARRANTY OF FITNESS FROM A PARTICULAR PURPOSE, AND ALL SUCH IMPLIED WARRANTIES ARE EXPRESSLY EXCLUDED.

THE REMEDIES DESCRIBED ARE EXCLUSIVE AND IN NO EVENT SHALL THE MANUFACTURER, NOR ANY SALES AGENT OR OTHER COMPANY AFFILIATED WITH IT OR THEM, BE LIABLE FOR SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR THE BREACH OF OR DELAY IN PERFORMANCE OF THIS WARRANTY. THIS INCLUDES, BUT IS NOT LIMITED TO, LOSS OF PROFIT, RENTAL OR SUBSTITUTE EQUIPMENT OR OTHER COMMERCIAL LOSS.

PRICES: Prices and specifications are subject to change without notice. All orders will be invoiced at prices prevailing at time of shipment. Prices do not include any local, state or federal taxes.

RETURNS: Products may not be returned without prior written approval from the Best Buy Automotive .

DUE TO THE COMPETITIVENESS OF THE SELLING PRICE OF THESE LIFTS, THIS WARRANTY POLICY WILL BE STRICTLY ADMINISTERED AND ADHERED TO.